

K-Lever II Installation Instructions

2023 Tri-Glide

***This installation should ONLY be performed by a Professional.
Serious Injury or Death may occur if not installed properly.***

Remove the Front Brake Master Cylinder Assembly.

Leave the Original Front Brake Hose. Install the K-Lever II onto the Handle Bars. Attach the Original Front Brake Hose onto the BOTTOM Fitting of the K-Lever II.

Remove the Rear Brake Pedal & Master Cylinder Assembly. Install the New Brake Hose onto the OEM Rear Brake Hose Banjo Fitting. (Rotate the Fitting-See Picture) Route the Hose up along the Right Side Frame Down Tube under the Main Wiring Harness and up along with the Original Front Brake Hose to the TOP Fitting on the K-Lever II. (Zip Tie where appropriate)

Note: On Trikes the Top Lever is the Rear Brake

Bleed the Front Brakes. Bleed the Rear Brakes. Check for leaks.


Do the Brake Lights work properly?

+25 Miles

+25 Miles TEST RIDE +25 Miles
+25 Miles

Ensure Front & Rear Brakes work “Properly”.
Adjust Lever Positions.

**Recheck that all Fittings are Tight and Leak Free.
Confirm the Brake Lights work properly.**

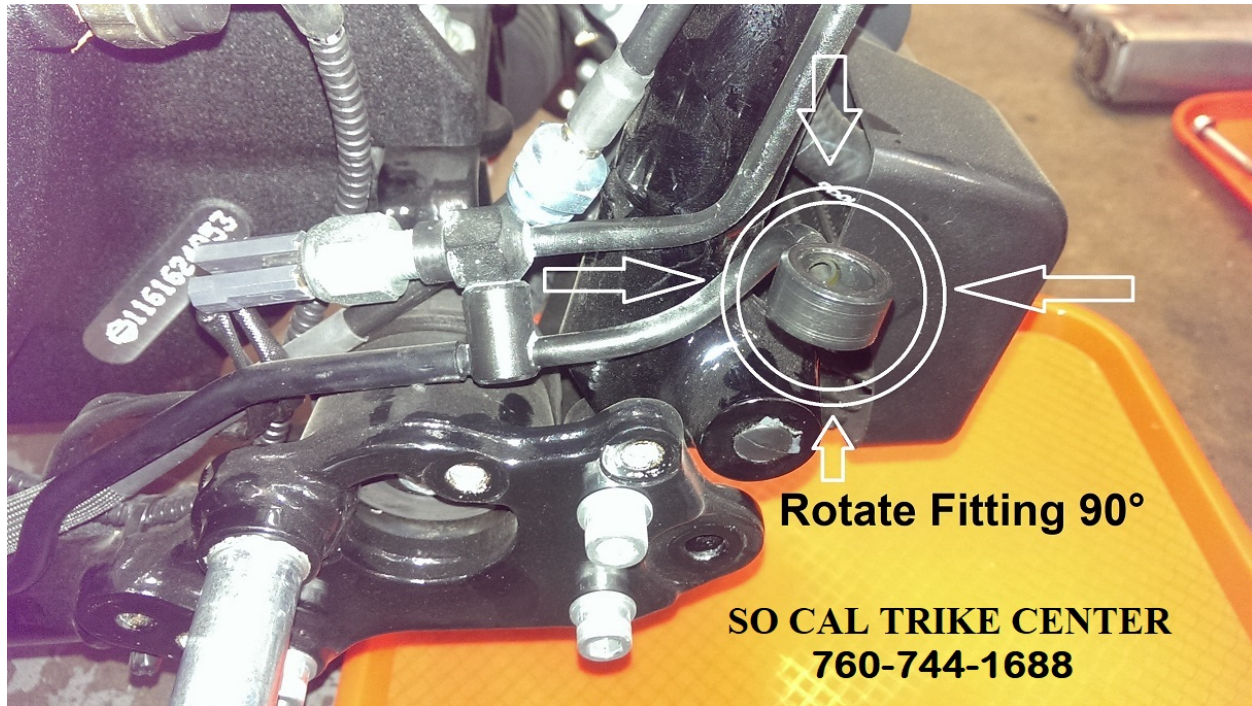

California's 1st Trike Dealer

SO CAL TRIKE CENTER

TheTrikeGuy@.com

TRIKES / BIKES / TRAILERS / SIDECARS / Handi-cap

Lehman - Champion - Motor Trike - Tilting Motor Works
CSC - Hannigan - DNA - Paugcho - Frankenstein

Handicap / Disability



Specialist

760-744-1688

"Let a Trike be your legs." **Rix Eden**

1050 Linda Vista Dr. | San Marcos, CA 92078

SO CAL TRIKE CENTER
TRIKES, BIKES, TRAILERS, AND SIDECARS
1050 Linda Vista Drive, San Marcos, CA 92078